


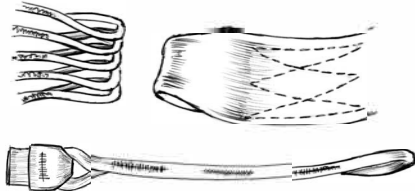

Alink for Main Canopies

PN: P 1487-00 (Gray Bartack)



1.



155 mm / 6.125 inch

Alink for Reserve Canopies

PN: P 1487-01 (Red Bartack)




170 mm / 6.75 inch

Instructions for ALink Installation

Aerodyne Research, LLC: 1407 Flightline Blvd Unit 14 Deland, FL 32724, USA.
+1-813-891-8300 www.flyaerodyne.com


2.

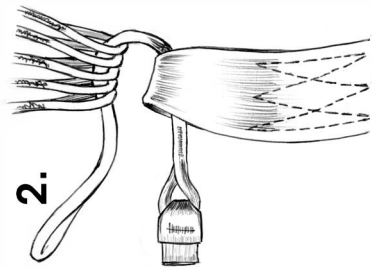

Pass the ALink through the suspension line loops and riser as shown.


Ensure that you have passed the ALink through all the suspension lines and that the suspension lines are clear to move.

3.

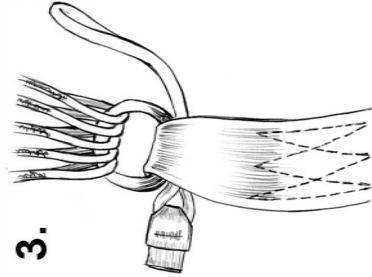

Pass the ALink loop through the risers, as shown.

4.

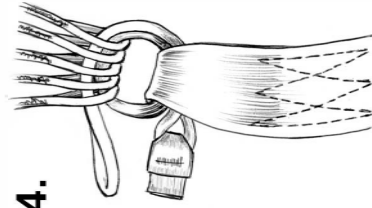


Pass the ALink loop through the suspension lines one more time, as shown.

Ensure that the ALink passes through all the suspension line loops.

Check that the suspension lines are clear to move, make sure you have not passed the ALink in between the yarns of the lines.

5.

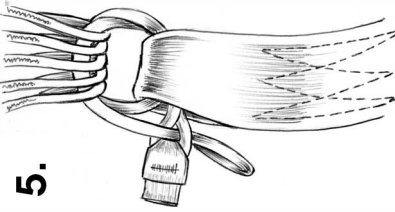

Pass the loop end through the tab end, as shown.

WARNING




DO NOT

pass the tab directly through the loop. Please follow steps 5 & 6 carefully.

Feed the loop back over the tab.


6.

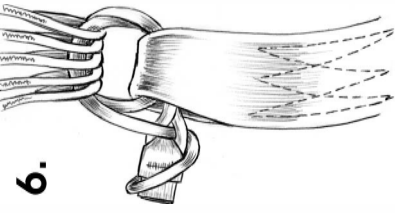

Larkshead, as shown. Pull tight, ensure the larkshead is secure.

Check that the suspension lines can move freely over the ALink and make sure you have not passed the ALink in between the yarns of the suspension lines.


7.

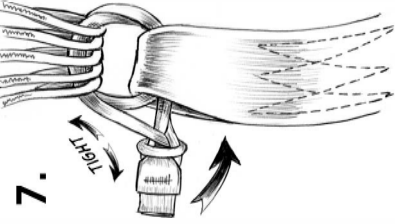

Tuck the tab away as shown.

Hold the suspension lines and riser and give a sharp pull to set the ALink.

8.

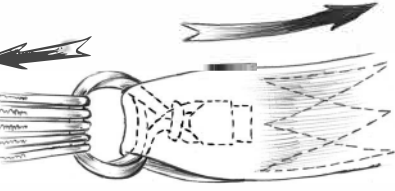

WARNING



It's important to secure the tab in the webbing pocket by tacking the ALink in place with a single stitch of tacking cord through one side of the riser, and knotted in the middle.

NOTE: It is recommended you replace the Alinks with every new lineset. Check the Alinks for excessive wear and tear, and replace when necessary.